


WeatherTech®

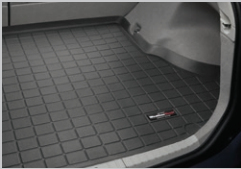

Cargo Liners

- Complete trunk and cargo area protection
- Digitally designed for each application
- Remains flexible under temperature extremes
- Available for car trunks, SUVs and minivans

Fitting Instructions

Your new WeatherTech® Cargo Liner is custom molded to fit your particular vehicle. Upon removal from the box, you will notice that the liner may not completely unroll and lie flat. This is normal and only temporary. Just place the liner on the floor, or in the back of your vehicle with a weight on each corner (books work well). After about 15 minutes, your liner will remain flat.

Your liner is made from an engineered resin that is both lightweight and extremely durable. The easiest way to clean your liner is with a damp cloth or sponge. For the best results use WeatherTech® TechCare® FloorLiner™ & FloorMat Cleaner and Protector. We do not recommend Armor-All® or STP Son-of-a-Gun® as these types of products make the liner slick, and cargo will slide.

Help!

If you have any questions regarding installation or use of your WeatherTech® product, please call our Customer Service Department at (630) 769-1500, Monday through Friday, 9 a.m. to 5 p.m. Central Time. We want to help you get the most out of your new WeatherTech® product.



Proudly Designed,
Engineered and
Manufactured with
American made
Tooling in the USA



1 MacNeil Court • Bolingbrook • IL • 60440
PHONE (630) 769-1500 • (800) 441-6287 • FAX (630) 769-0300